





SEWAGE TREATMENT PLANT

タイコーシップクリーン"SBHシリーズ"は海の公害防止 に挑む大晃機械が、永年培ってきた汚水処理の技術を傾 注して開発した小形・高性能な船舶用汚水処理装置です。

MARPOL73/78条約ANNEX IVで定める、国際航海 に従事する総トン数400GT以上または15人以上乗船する 全ての船舶に搭載可能で、運転や保守もより一層簡単な ものとなりました。

特長

超小形でメンテナンスが容易です。

高性能:接触酸化法を一から見直し、その処理効率を極限まで追及した 結果、小形にもかかわらず新基準MEPC.227(64)の規制値を十分満 足することができる装置となりました。

IMO決議MEPC.227(64)適合品

※SBHシリーズは、特別海域(バルト海)を航行する旅客船には搭載できません。

全自動一体型:排出ポンプ及びブロワを装置に組み込んだ一体形としたことにより、煩わしい配管・配線工事が簡略化されました。装置は、汚泥引抜きや消毒薬追加などの若干の維持管理を除いて全自動化されています。

UV殺菌装置を採用:UV殺菌と塩素殺菌の併用によって、より確実な 殺菌を行なうと同時にUVによる残留塩素の中和効果によって、処理水 の残留塩素は超低濃度となっています。

- その他:短い馴致期間。



仕様

The Taiko Ships Clean "SBH Series" are compact sized sewage treatment plant with superior performance capabili-ties, designed exclusively for marine installations, and which were developed by TAIKO with high technology of many years experience for Maritime Public Nuisance.

These plants can be installed in all ocean-going vessels of 400 or more gross tons, or accommodating 15 or more peoples as described in MARPOL73/78 Annex IV.

Feature

Super small type and easy maintenance.

High Capabilities

Reviewing the bio-filter method from the start and pursuing the method treatment efficiency to the limit have realized a new sewage treatment plant which meets the new standard, MEPC.227(64) regulated values, though it is a small plant.

Comply with IMO resolution MEPC.227(64)

**SBH Series Sewage can not be installed in Passenger ships which sail on special areas (Baltic Sea).

Fully Automatic Integrated Type

A pump and a blower are mounted on the device. Therefore, piping and wiring works are simplified.

These devices are fully automatic except a few maintenance and control, such as removal of sludge and filling disinfectant, etc.

UV Sterilizer

UV and chlorine allows achievement of more proper sterilization and, at the same time, the effect of neutralization of residual chlorine by UV Sterilizer reduces the concentration of the residual chlorine in the treated water to a very low level. The stability period is shorten.

Specification

Network Specified Conditions

項目 Item			形式 Model	SBH-15	SBH-25	SBH-40	SBH-65
処理人数 Nu	umber of persons 人/E	ers pers	ons/day	15	25	40	65
汚水量 Ave	erage of sewage volume L/E	E/da	iy	900	1500	2400	3900
最大汚水量 Pe	ak of sewage volume L/h	n×回/日 L/h×	time/day	94×1	156×1	250×1	406×1
BOD負荷 BC	DD Load g/E	∃ g/da	ау	202.5	337.5	540	877.5
ブロワ 	風量(標準吸込状態) A	Air flow	m³/min	0.15	0.255	0.40	0.59
	圧力 F	E力 Pressure MPa		0.0	15	0.02	
Blower	モータ出力 ト	Notor Power	kW	0.4	0.4	0.75	0.75
排出ポンプ	流量(Capacity	m³∕h	4 (60)Hz)	3 (50Hz)	
DischargePum	。 揚程 ト	Head	m	20 (60Hz) 12 (50		DHz)	
Dischargerum	。 モータ出力 N	Notor Power	kW	1.5			
※電源 Power source 標準(特殊) Standard (Special)		(loiol)	$AC440V \times 60Hz \times 3\phi (AC415, 400, 380V \times 50Hz \times 3\phi)$				
※電源 Power source 標準(特殊) Standard (Special)			AC220V×60Hz×3¢				

※制御盤内のトランスでAC100Vに変圧して操作電源としています。

*The operation electric power is reduced to AC100V by a transformer in the control panel.

NIT Nodel Designation Code

■標準予備品 Spare Parts

SBH-1	5

設計最大処理人数 Design number of persons

Item	パーツ Parts	Item	パーツ Parts
ポンプ Pump	メカニカルシール Mechanical seal ボールペアリング Ball bearing	電気部品 Electricparts	電球 Lamp bulb UVランプ UV Iamp
ブロワ Blower	ボールペアリング Ball bearing オイルシール Oil seal Vベルト V belt	付属品 Accessory	潤滑油 Lubricating oil 消毒薬 Disinfectant ビニル手袋 Vinyl gloves はさみ Tongs

SEWAGE TREATMENT PLANT

構造

接触酸化法とは生物膜方式による処理方法の一つで、接触材 を槽内に水没させて汚水を空気曝気にて動かし、接触材表面 に発生する生物膜と接触させ汚水中の有機性汚濁物質(BOD 源)を生物化学的酸化により処理する方法です。

① 接触酸化槽

船内便器からの汚水は接触酸化槽に流入します。浄化を妨げる異物は スクリーンにより取り除かれます。ブロワで空気を送ることにより回流 が起こり汚物を粉砕すると同時に接触材に付着した微生物に酸素を補 給します。

② 分離槽

接触酸化槽で有機物を分解した処理水に含まれるSS分を静置沈殿さ せます。また、浮上したスカムもこの槽で分離処理します。

③ 処理水槽

分離槽でSS分を除去された処理水は越流して塩素剤から溶け出した 塩素と混合され処理水槽へ溜まります。処理水槽の処理水は塩素とUV 殺菌装置(循環)によって十分に殺菌され、レベル制御により自動的に船 外へ排出されます。

Structure

The Bio-Filter Method is a processing sewage by utilizing a biological film. Packing media are placed in the tank and liquid sewage is circulated around it by means of aeration. The sewage contacts the biological film causing growth of bacteria on the surface of packing media and organic matter (BOD source) is treated by biochemical oxidation.

1 Bio Filter Tank

Sewage from toilets in the ship flows into the Bio-filter Tank. Foreign objects which could obstruct operation of the plant are held by a screen. Air from a blower causes circulation of the liquid and breaks up the solids.

It also supplies oxygen to the microorganisms attached to the packing media.

2 Separation Tank

This tank allows static deposition of the Suspended Solid (SS) content included in the treated water after organic matter has been resolved in the bio-filter tank, a floating scum is also resolved.

3 Treated Water Tank

The treated water from which SS constituents have been removed in the separation tank overflows, is mixed with the chlorine which has been dissolved out of the sterilizer, and then accumulates in the treated water tank, where it is sufficiently sterilized by chlorine and the UV sterilizer (by circulation). And then it is automatically discharged outboard by means of a level control.



外形寸法

Dimensions



形式	外形寸法 Dimensions (mm)					開放 スペース	質量 Weight (kg)			
Model	А	В	С	D	R	S	Т	OVERHAUL SPACE	乾燥 Dry	水張り Wet
SBH-15	812	1144	1167	1530	100	40	40	800	640	1115
SBH-25	1042	1344	1368	1530	100	50	40	800	800	1600
SBH-40	1170	1537	1456	1830	150	65	50	1000	1030	2380
SBH-65	1442	1806	1728	1830	150	80	50	1000	1280	3460

配管系統図



■汚物集合タンク外形寸法 Sewage Collecting Tanks

船内便所は各所に分散しています。各便所からの汚水を、汚水処理装置に集 合配管出来ない場合に、この汚水集合タンクを設置して下さい。この汚物集合 タンクに貯まった汚水は、附属する汚物移送ポンプによって、自動的に汚水処理 装置に送られます。

Toilets in vessel are scattered all over. When pipings cannot be made to collect sewage from every toilet to a sewage treatment device, please install this sewagcollecting tank. The sewage collected in this sewage collecting tank is transferrede automatically to the sewage treatment device with an attached sewage transfer pump.



形式Mo	odel	SCT-200P		
タンク容量(&) Tank volume(L)		200		
質量 Weight _(kg)	乾燥 Dry	380		
	水はり Wet	580		
移送 ポンプ	60Hz	4m²/h×20m×1.5kW		
Transfer pump	50Hz	3m [*] /h×12m×1.5kW		

大晃機械工業株式会社 TAIKO KIKAI INDUSTRIES CO., LTD.

士 法 工 担 =740.1500 小口俱能手那田左旋时上宫下田左旋000.1	
■本 社・工 場 〒742-1598 山口県熊毛郡田布施町大字下田布施209-1	(
TEL:(0820)52-3114 FAX:(0820)53-1001 E-mail business@taiko-kk.com	
■東 京 支 店 〒101-0051 東京都千代田区神田神保町2-38 いちご九段ビル6階	
TEL:(03)3221-8551 FAX:(03)3221-8555 E-mail tokyo-br@taiko-kk.com	
大阪支店 〒541-0048 大阪市中央区瓦町3-4-7 KCビル8階	
TEL:(06)6231-6241 FAX:(06)6222-3295 E-mail osaka-br@taiko-kk.com	
上海駐在事務所・韓国大晃	
Head Office 209-1 Shimotabuse, Tabuse-cho, Kumage-gun, Yamaguchi Pref. 742-1598 Ja TEL:81-820-52-3114 FAX:81-820-53-1001 E-mail:business@taiko-kk.com	pan
Tokyo Branch 6th floor, Ichigo Kudan Building, 2-38 Kanda-Jinbo-cho, Chiyoda-ku, Tokyo 101-005 TEL:81-3-3221-8551 FAX:81-3-3221-8555 E-mail:tokyo-br@taiko-kk.com	51 Japan
Osaka Branch 8th floor, KC Building, 3-4-7 Kawara-machi, Chuo-ku, Osaka 541-0048 Japan TEL:81-6-6231-6241 FAX:81-6-6222-3295 E-mail:osaka-br@taiko-kk.com	15 ppm B SEPARAT
Shanghai Office-Taiko Korea	
ISO 9001の認証取得 御問い合わせの詳細は別紙 【BUSINESS OFFICE NETWORK】を御覧ください。	
ISO 9001certified For any inquiries, please refer to attached [BUSINESS OFFICE NETWORK]	
●このカタログに記載した製品は性能向上のため予告なしに寸法及び仕様を変更することがあります。	

•The sizes and specifications of the products in this catalog are subject to improvement.

Piping diagram

■注意 NOTES

- 1. "H1"はL.W.L.より高くして下さい。
- 2. "H2"は、タンク頂板より高くして下さい。
- 3. 本体の空気抜管は勾配を付けて配管し、パイプ内にドレンが溜ま らないようにして下さい。
- 曝気後の空気は多量の湿気を含んでおります。
- 4. 空気抜管は空気の滞留しない場所へ配管し、先端を下向きに曲げて下さい。また、配管抵抗は25mm(水頭)以内の損失となるようにして下さい。
- 5. 波止弁の逆止が十分働かなくなる事も配慮し、海水がタンクへ逆 流しないように考慮して下さい。
- 6. オーバーフロー配管は直接船外に排出しないように配管下さい。
- 7. 排出ポンプの出口には逆止弁を設け、配管内の水が逆流しないようにして下さい。
- 8. 排出管にはサイフォン現象を防止する処置を講じて、装置内が空にならないようにして下さい。
- 1. "H1" should be made higher than the L.W.L..
- 2. "H2" should be made higher than the top of the tank.
- 3. The vent pipe of the unit should be installed with a slope to avoid blocking the piping by the condensed water.
- 4. The vent pipe should be piped to a place where the air is not still, and the top of the pipe should be bent downward. Set the resistance of the piping within 25mm(Aq).
- 5. Pay attention to the piping so that water will not flow back from the sea into the tank.
- 6. Do not connect the overflow pipe to over board directly.
- 7. Set the check v/v to the outlet of the discharge pump and do not let water run back inside of the piping.
- 8. To prevent the siphon phenomenon inside of the discharge piping, don't keep the inside empty.



URL http://www.taiko-kk.com



2018/07 FUJIMOTO